

图片仅供参考, 请以实物为准

阅读使用手册, 以便更好地使用

装箱清单

条码扫描器一个, 充电线一根, 说明书一本 (具体附件配置因产品型号而异)

特别申明

为了方便广大用户掌握和使用好本产品, 产品各项设置功能未能全部在本说明书中列出来, 删去了一些繁琐的操作, 去繁从简, 满足用户适用的原则, 从而大大提高用户的工作效率, 若使用中有什么疑问或者需要更多的详细资料, 可向当地经销商咨询详细说明书。

此说明书已经过严格仔细的检查和审核, 但仍不排除有文字拼写及技术的疏忽和错误。对于此类的疏忽和错误将于新版说明书中修正且不另行通知。此说明书版权归本公司所有, 任何其他单位和个人不得修改。

基本设置

1 通讯模式



SPP 模式



HID 模式

2 初始化



扫描器初始化

3 软件版本号



扫描器软件版本

4 传输模式



随机模式



盘点模式

声光提示

简介:

该条码识读设备为计算机信息系统提供了精确、易用和快速的数据录入和数据保存的完整解决方案。
本产品有“手动式”和“连续扫描模式”
本产品为蓝牙一维条码识读设备, 产品需与蓝牙接收设备连接完成后才能正常传输。
本产品具有盘点功能, 直接进行一些日常的简单盘点工作, 可存储 2000 条 8 位数据的条码。
所有译码器的参数设定都可通过条码的扫描来完成, 并保存在存储记忆体中, 在关闭电源后仍保留设置。

使用方法:

- 长按“扫描”键1-2秒, 扫描器启动;
- 使用手机进行配对, 按“扫描”键, 进行读码上传;
- 按“模式”键, 可切换盘点模式和随机模式, 响滴一声为盘点模式, 响滴滴滴 (低低高音) 三声为随机模式
- 随机模式下, 按“删除”键, 可删除上传的条码数据;
- 盘点模式下, 按“删除”键, 可删除内存的条码数据;
- 指示灯分别为充电指示灯和状态指示灯
- 充电时, 充电指示灯亮红灯, 充满电后, 充电指示灯亮蓝灯;

SPP模式下,

- 正常电压, 蓝牙未连接, 状态指示灯为绿灯快闪烁;
 - 正常电压, 蓝牙已连接, 状态指示灯为绿灯常亮;
 - 低电压, 蓝牙未连接, 状态指示灯为红灯快闪烁;
 - 低电压, 蓝牙已连接, 状态指示灯为红灯常亮;
- HID模式下 (默认为HID模式),
- 正常电压, 蓝牙未连接, 状态指示灯为绿灯慢闪烁;
 - 正常电压, 蓝牙已连接, 状态指示灯为绿灯常亮;
 - 低电压, 蓝牙未连接, 状态指示灯为红灯慢闪烁;
 - 低电压, 蓝牙已连接, 状态指示灯为红灯常亮;

声音指示:

正常电压, 启动声音为滴滴两声;
低电压, 启动声音为滴滴滴三声;
读码上传成功为两声, 读码成功一声, 上传成功一声。
产品的各项功能未全部在本手册中列出, 请您与供应商联系以获得更多详细资料。所有权利, 包括本说明手册最终解释权由本公司保留。

5 盘点选项



盘点数目查询



盘点条码上传

6 节电选项



10分钟进入休眠



60秒进入休眠

7 上传电量



上传电量

8 组合键



组合键1



组合键2

扫条码“组合键1”, 按“模式”键+“删除”键, 可调出IOS键盘, 主要针对IOS系统;
扫条码“组合键2”, 按“模式”键+“扫描”键, 上传盘点数据, 必须在盘点模式下才生效。

9 进入配对



进入配对

当蓝牙扫描器与设备连接过了, 需要再扫下条码“进入配对”, 断开与设备的配对、连接, 方可与其他的设备进行配对、连接。

注意事项

1. 请勿直视或通过使用光学仪器 (望远镜) 直接观察设备光亮部分!
2. 请勿自行拆卸镜片防护罩上的挡板, 打开时有设备照亮, 避免眼睛受到直接照射!
3. 如需拆开、调整或修理时, 请专业人员作业!
4. 禁止拆解、撞击、挤压、投入火中或水中。若出现严重鼓胀, 请勿继续使用。请勿置于高温环境中!

读取技巧

为了获得良好的读取效果, 取景器投射出的瞄准光束应对准条码正中, 不过可以以



任何方向瞄准以便读取。

将扫描器对准条码, 按动触发器, 使瞄准光束位于条码的正中。

扫描器越接近条码, 瞄准光束越小; 扫描器越远离条码, 瞄准光束越大。如果条码较小, 应使扫描器靠近条码; 如果条码较大, 扫描器应离条码远一点, 这样更容易正确读取条码。

如果条码反射度高 (例如, 镀膜的), 您可能需要以某一角度倾斜扫描器, 以便成功扫描条码。

简易保养

1. 扫描窗上的污渍和灰尘有时会影响扫描器的工作。清洁时应使用品质好的面巾纸, 轻轻擦拭。然后用吹气球吹干净。如长期使用纸品不佳的纸进行擦拭, 会损坏扫描窗表面光洁度, 影响扫描器的读取效果。
2. 扫描器的外壳可使用清洁软布进行擦拭。需要的话, 可用少量的洗洁精加入水, 用软布蘸水后擦拭。如有疑问, 请与当地经销商联系。

10 声音设置



开启



关闭

11 触发模式



按钮触发模式




连续扫描模式

故障自检

序号	问题	可能原因	解决方案
1	按下按键后无反应	扫描器电量不足	请确保扫描枪的电池电量充足, 若电压过低, 请及时给扫描器电池充电
2	有照亮, 但无法读取条码	条码损坏 扫描器与条码之间的距离不合适	请尝试扫描具有相同条码类型的其他条码 请把条码扫描器移近或移远条码
3	扫描的数据在主机上显示不正确	输入法错误 对扫描器进行了其他设置	将输入法转换成标准的英文输入法 将扫描器的参数恢复到出厂设置状态, 或者联系当地经销商
4	配对不成功	主机蓝牙没有开启	请开启主机蓝牙, 再将扫描器与主机重新配对
5	其他情况无法传输数据	不在传输范围	请保持扫描器与主机在15米范围内进行操作

1D Bluetooth Barcode Scanner

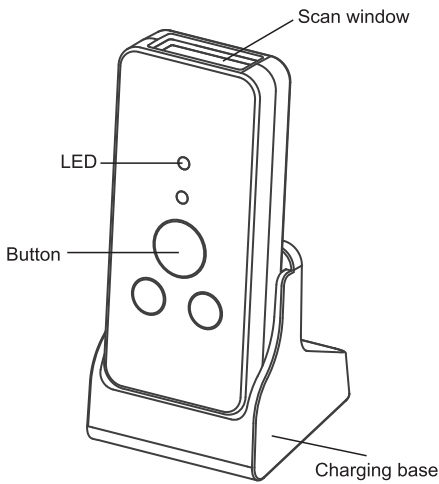

Pictures are for reference only. Please refer to physical objects.

Please read the user manual carefully before using.

Packing list

Barcode scanner,cable,user manual (Specific accessories vary by product model)

Voice and light alert

Brief introduction:

The barcode reading device provides a complete solution to input data and save data accurately, easily and quickly for computer information system.

This product has "manual mode" and "continuous scan mode".

Being bluetooth barcode scanner device, the product needs to be connected to the Bluetooth receiving device before it can be transmitted normally. This product has the function of checking and can store 2000 barcodes with 8 bits of data.

The settings of all decoders can be completed by scanning corresponding barcode and stored in the storage memory, and the settings are retained after the power is turned off.

Instructions:

Press and hold the "Scan" button for 1-2 seconds, then the scanner starts; Use your device. After paired, press the "Scan" button to read code and upload data;

Press the "Mode" button to switch the inventory mode and the random mode. The sound of one drop is the inventory mode, and three drops (low, low and high pitch) is the random mode.

In the random mode, the uploaded barcode data can be deleted by pressing the "Delete" button;

In the inventory mode, the barcode data in memory can be deleted by pressing the "Delete" button.

The indicators are the charging indicator and the status indicator. When charging, the charging indicator lights up in red. When the battery is fully charged, the charging indicator lights up in blue.

In the SPP mode,

In normal voltage, if Bluetooth is not connected, the status LED will flash quickly in green.

In normal voltage, if Bluetooth is connected, the status LED will be steady green;

In low voltage, if Bluetooth is not connected, the status LED will flash quickly in red;

In low voltage, if Bluetooth is connected, the status LED will be steady red;

In the HID mode(default setting),

In normal voltage, if Bluetooth is not connected, the status LED will flash slowly in green.

In normal voltage, if Bluetooth is connected, the status LED will be steady green;

In low voltage, if Bluetooth is not connected, the status LED will flash slowly in red;

In low voltage, if Bluetooth is connected, the status LED will be steady red;

Sound indication:

In normal voltage, the starting sound is two beeps;

In low voltage, the starting sound is three beeps;

There will be two beeps if read barcode and upload data successfully, the first one for successful reading and the latter for successful upload.

Not all functions of the product are listed in this manual, please contact the supplier for more details. All rights, including the final interpretation of this instruction manual, are reserved by the company.

Notes: ⚠

- Do not look directly at or illuminate by means of an optical instrument (telescope)!
- Do not remove the baffle on the lens guard and avoid direct exposure to the eyes!
- Please work with professional staff when it needed to be disassembled, adjusted or repaired!
- Do not disassemble, impact, squeeze, or put into fire or water. If there is a serious bulging, please do not continue to use. Do not put it in high temperature!

Reading Skills

In order to obtain good reading effect, the target beam projected by the viewfinder should aim at the center of the barcode, but can be aimed in any direction for reading.



Aim at the barcode and press the trigger to make the target beam in the middle of the barcode.

The closer to the barcode, the beam becomes smaller. Farther away from the barcode, the beam becomes larger. If the barcode is small, the scanner should be close to the barcode. If the barcode is larger, the scanner should be further away from the barcode, making it easier to read the barcode correctly.

If the barcode is high in reflectance (for example, coated), you may need to tilt the scanner at an angle to successfully scan the barcode.

Simple-maintain

- The stains and dust on the scan window will affect the scanner's working. When cleaning, you should use good quality facial tissue to wipe gently. Then blow it clean with a blown balloon. If you use poor paper to clean for a long time, it will damage the surface of the scanning window and affect the reading effect of the scanner.
- The casing of the scanner can be wiped with a clean soft cloth. If needed, use a little detergent to add water and rub it with a soft cloth. If in doubt, please contact the local dealer.

Statement

In order to facilitate the majority of users to master and use this product, the settings are not fully listed in this manual. Some tedious operations have been omitted, greatly improving working efficiency. If there is any doubt or need for more detailed information, please contact the local dealer.

This manual has been carefully checked and reviewed, but errors in spelling and technology maybe are still not excluded completely. Neglects and errors will be fixed in the new version without notice. This manual is copyrighted by the company and may not be modified by any other units or individuals.

The basic setting

1 Communication Mode



2 Reset



3 Firmware Version



4 Transmission Mode



5 Inventory Options



6 Power Saving Options



7 Power check



8 Macrokey



Scan the barcode "Combination Key 1" and press button "Mode" and button "Delete", then IOS keyboard can be displayed, mainly for IOS system mobile phones;

Scan the barcode "Combination Key 2" and press button "Mode" and button "Scan", then inventory data can be uploaded, which only be effective in the inventory mode.

9 Fast Pairing



When the Bluetooth scanner has connected to one device, firstly you need to disconnect to the previous device. and scan the barcode "Fast Pairing" again, and then you can pair and connect to other devices.

10 Sound Setting



11 Trigger Mode



Self-checking

No.	Problem	Possible Reason	Solutions
1	No response after pressing the button	Low power in the scanner	Make sure that the scanner has enough power. If the voltage is low, please charge the scanner in time
2	The scanner lights has but can not read the codes	The codes are damaged	Please try to scan the other similar codes
		The distance between scanner and code is not suitable	Move the scanner close or far from the code
3	The data on the computer is wrong	Wrong input	Turn the typewriting to standard English Input Method
		Other settings of the scanner	Resume to default setting or contact local distributor
4	Pairing unsuccessful	Bluetooth on the host is not turned on	Please turn on Bluetooth on the host and then re-pair the scanner with the host.
5	Unable to transfer data due to other conditions	Out of the transmission range	Please keep the scanner and the host operating within 15 meters.